





Ultra-low Odor, Non-Bloom, High Strength CA Bonder

PRODUCT DESCRIPTION

Incure Quik-Fix[™] 524 is a single component ethoxyethyl cyanoacrylate designed for applications requiring non-blooming properties, especially in environments where high humidity is a concern. Very low in viscosity, it is clear and provides up to 3,000 PSI for metals and up to 1,300 PSI for plastics. Incure 524 is resistant to some solvent, such as alcohol, petrol and aromatic hydrocarbons and is formulated to meet ISO 10993-5.

UNCURED PROPERTIES

Chemical Type	Ethoxyethyl				
Appearance	Clear				
Density, g/ml	1.06	Flash Point	80°C (176°F)		
Viscosity, cP (rpm)	20	40 - 60	Spindle	0	
Other viscosities are a viscosity range reque this product may be p Email us at: support@ local distributor for mo	ASTM	D2556			

Viscosity (cP) taken at 25°C (77°F) - Call to enquiry for other viscosities.

SETTING TIME FOR MATERIALS (s)

Steel	40	EPDM	5	-
ABS	15	Wood	-	-

FULL CURE (hr)

@25°C, 85% RH	4
@25°C, 60% RH	6

CURED PROPERTIES

Service	-55°C to 95°C	
Temperature	(-67°F to 203°F)	

Incure Inc.

1 Hartford Square, Box 16 West, Suite C-3 West Gate, Door 18, New Britain, CT 06052, USA

Incure Adhesives Manufacturing Pte Ltd 33 Ubi Avenue 3 #04-23, Vertex Tower B Singapore 408868

support@uv-incure.com www.uv-incure.com




SHELF-LIFE, STORAGE, USE AND HANDLING

Shelf-Life of this unopened product is a minimum of 12 mths from date of manufacture. Avoid direct exposure of bottle to visible light at all times. Containers should remained covered when not in use. Product should be stored 15°C to 25°C (59°F to 77°F). Transfer of product into other packages void all warranties. Users should ensure all bonding surfaces are free of grease, mold release, or any contaminants, as bonding performance will be compromised. Dispense onluy to one surface only. Bonding parts should be firmed held together for a few seconds before releasing. All tests for cured bonds should be carried out at ambient temperature. For safe handling of this product, please read Material Safety Data-sheet (MSDS) prior to use. Organic solvents, such as IPA, may be used to wipe away uncured material from surfaces.

EtO and GAMMA STERILIZATION (Not Applicable)

All Incure Medical products are formulated to subject to standard sterilization methods, such as EtO and Gamma Radiation of 25 to 50 kGrays (cumulative). Enhanced moisture and thermal resistance of this product show excellent adhesion and bonding strength after one cycle of steam auto-clave test. Depending on bond design and structure of the application, users should test specific assemblies after subjecting them to the test requirements. Please consult Incure Support Team for assistance, if your devices are subjected to more than one sterilization cycles.

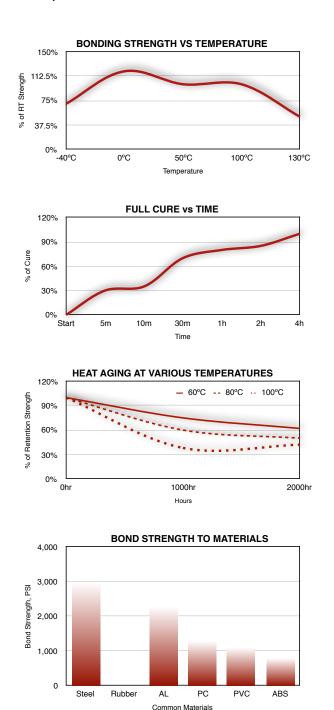

Figures are tested to ASTM 4501. Results may differ with varying application bonding areas, contact surface areas, coatings and material grades, etc.

NOTE

The data contained in this document are furnished for information only. We cannot assume responsibility for the results obtained by others over whose methods we have no control. It is the user's responsibility to determine suitability for the user's purpose of any production methods mentioned herein. INCURE will not be liable for any indirect, special, incidental or consequential loss or damage arising from this INCURE product, regardless of the legal theory asserted. INCURE recommends that each user adequately test its proposed use and application before repetitive use, using this data as a guide.